



RM2 - PANNIER FITTING KIT - FITTING INSTRUCTIONS

Maeving pannier


A pannier and fitting kit are available to purchase from Maeving.

Pannier fitting kit

Tools required: T20 Torx™, T25 Torx™.

Parts supplied:

1.	Pannier rail	1 off
2.	Bolt T25, M5 x 10 mm	2 off
3.	Pannier (not shown)	1 off

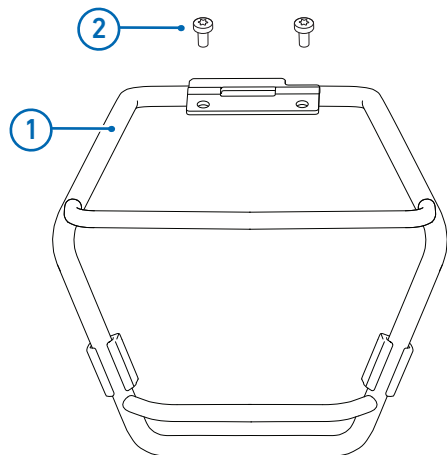

WARNING: The maximum safe carrying capacity for the pannier is 6.5 lbs (3 kg). Never overload the pannier, as this could cause the motorcycle to become unstable, which could lead to loss of control and an accident.



NOTICE: The maximum safe carrying capacity for the pannier is 6.5 lbs (3 kg). Never overload the pannier, as this could cause damage to the motorcycle and accessories.



Note: Support the motorcycle with the side stand or use suitable paddock stand(s) to improve access to the bottom of the frame.



Note: Make sure the motorcycle is in a clean and well-lit environment and lay out all the required parts needed to fit the accessory kit to your motorcycle before commencing the installation of the accessory kit.




Note: Read all of the information in this fitting instruction and fully understand the installation process before attempting to fit the accessory kit.

Pannier rail installation



Note: If the pannier rail is fully installed on the motorcycle, we would recommend it is not removed, unless necessary. If the pannier rail needs to be removed, reverse the pannier rail installation steps.


1. Remove the two bolts (1) M4 x 10 mm (T20 Torx™) securing the pannier rail bracket cover (2) and remove the cover.

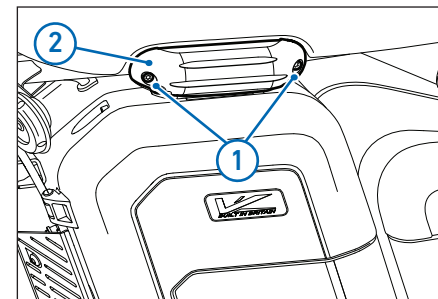


- Remove the two blanking plugs (1) from the pannier rail securing bracket (2).




Note: Save the blanking plugs if you intend to return your motorcycle to its original condition.

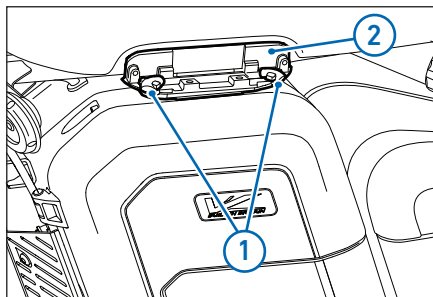

- Align the pannier rail (1) to the securing bracket (2). Install the two bolts (3) M5 x 10 mm (T25 Torx™) and tighten to **3.5 ft. lbs (5 Nm)**.

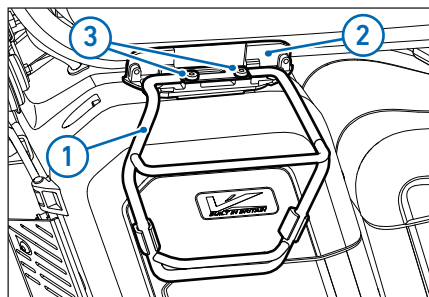


- Install the pannier rail securing bracket cover (1). Install the two bolts (2) (T20 Torx™) and tighten to **3 ft. lbs (4 Nm)**.

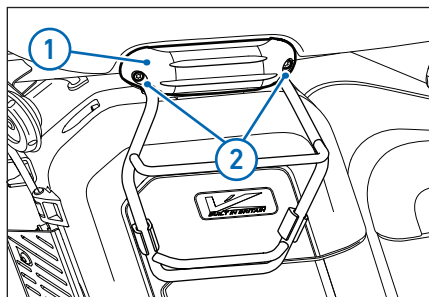


Pannier loading and installation

With the pannier rail fitted to the motorcycle, the pannier attaches to the motorcycle using the top two bars of the pannier rail.


- Place your items inside the pannier and fold the top of the pannier closed.
- Slide the G-clip (1) into the loop section (2) of the pannier. Pull the strap (3) to fully secure the pannier closed.

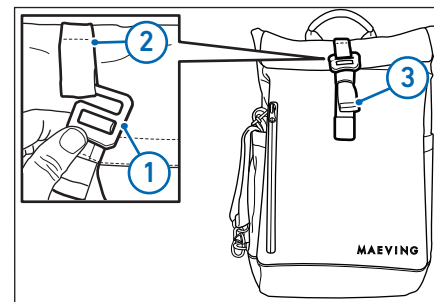


3. Press down on the locking clasp (1) on the pannier. Align the locking clasp hook (2) to the top bar (3) and the securing hook (4) to the lower bar on the pannier rail (5).

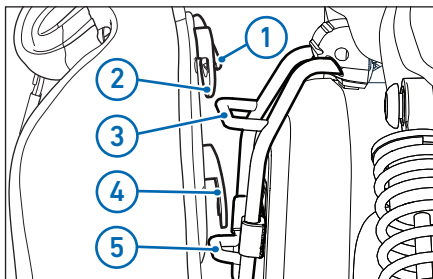

4. Lower the pannier to the pannier rail. Make sure the locking clasp (1) locks securely to the top bar (2) and the securing hook (3) remains engaged with the lower bar (4).

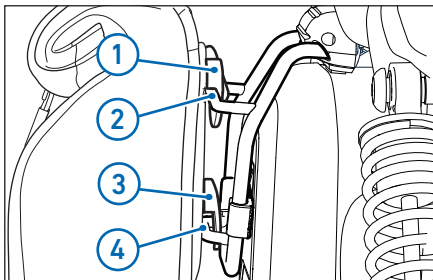

5. The pannier is now attached to the pannier rail and motorcycle.

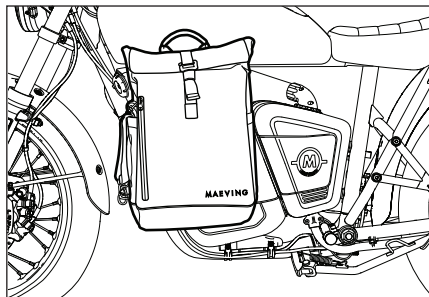

Note: Before riding the motorcycle, always give the pannier a pull and push to make sure it is securely attached to the pannier rail. If the pannier is not attached correctly, repeat steps 3 and 4.

www.maeving.com

For general enquiries in the USA, please email the
Maeving Support Team at: usa.support@maeving.com.

© Maeving Limited.

This publication, or any part thereof, may not be reproduced, copied or
translated without the sole permission of Maeving.

Published: December 2025 - US Version 1 (Based on UK version 1).
For the latest version of these instructions, please visit: www.maeving.com.

Produced by Illston Authoring Limited.
For more information visit www.illstonauthoring.com.