



RM2 - TOP BOX FITTING KIT (SOLO RACK) - FITTING INSTRUCTIONS


### Maeving top box fitting kit (Solo rack)

These instructions cover the fitting of the top box to the solo rack.

Tools required: T30 Torx™.

Top box fitting kit (solo rack) parts supplied:

1.	Rubber feet	4 off
2.	Fixing M6 x 16 mm, T30,	2 off
3.	Top box latch	1 off

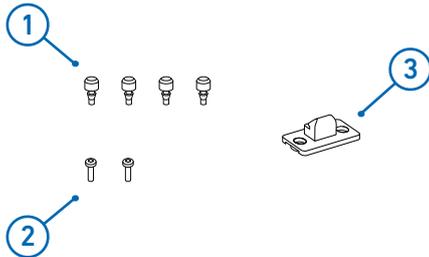

**WARNING:** The maximum safe carrying capacity for the top box is 3 kg. Never overload the top box, as this could cause the motorcycle to become unstable, leading to loss of control and could result in an accident, causing injury or death.



**NOTICE:** The maximum safe carrying capacity for the top box is 3 kg. Never overload the rear rack, as this could cause damage to the motorcycle and accessories.



**WARNING:** Evenly distribute the load within the top box and pack heavy items towards the bottom. Ensure that items are packed so that they will remain in place and will not shift while the motorcycle is moving. Incorrect loading may result in an unsafe riding condition, which may result in loss of motorcycle control and an accident causing injury or death.



**WARNING:** Throughout the fitting process, ensure that the motorcycle is stabilised and fully supported by the side stand to prevent risk of injury from the motorcycle falling.



**WARNING:** A torque wrench of known accurate calibration must be used when fitting this accessory kit. Failure to tighten any of the fasteners to the correct torque specification may cause instability leading to loss of control and could result in an accident, causing injury or death.



**Note:** Make sure the motorcycle is in a clean and well-lit environment and lay out all the required parts needed to fit the accessory kit to your motorcycle before commencing the installation of the accessory kit.




**Note:** Read all of the information in these fitting instructions and fully understand the installation process before attempting to fit this accessory kit.




**WARNING:** The use of the top box will result in the motorcycle exhibiting new handling characteristics that must be allowed for. Failure to do so may cause instability leading to loss of control and could result in an accident, causing injury or death.

### Installing the top box fitting kit (solo rack)


1. If you have not already fitted the Maeving solo rack (1) in place of the pillion seat on your motorcycle, you must follow the solo rack fitting instructions before proceeding any further.

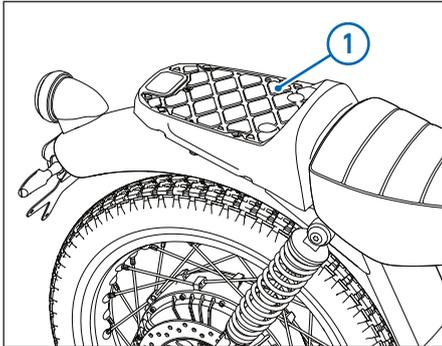


2. Remove the solo rack blanking trim (1) from the solo rack.

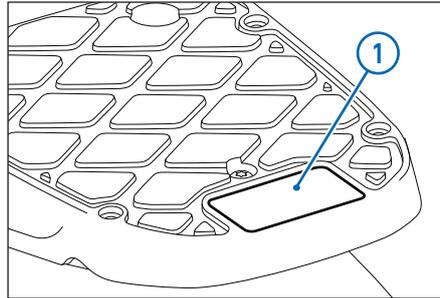


To do this, press the two side levers (2) (located under the solo rack) towards each other, and push the blanking trim out of the recess.

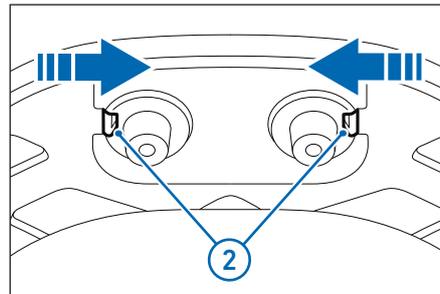

3. Place the top box latch (1) into position and fit the 2 fixings (2) M6 x 16 mm. Tighten the 2 fixings to **8 Nm**.

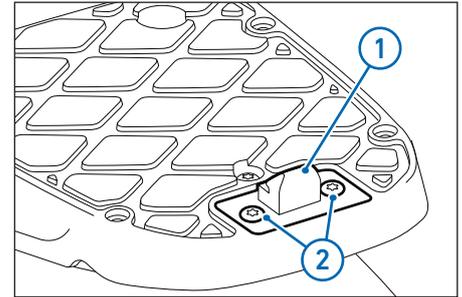




4. Fit the 4 rubber feet (1) by pushing down into the location holes.

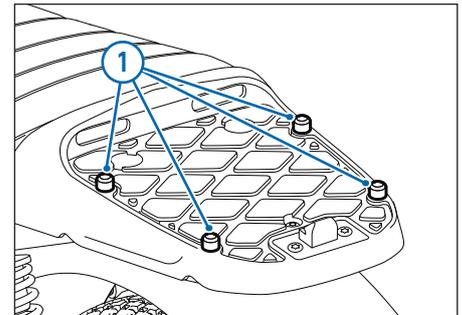



## Top Box Fitting Kit (Solo Rack)

### Installing the top box to the solo rack

1. Insert the key in the top box lock (1) and turn to the **UNLOCKED** position.

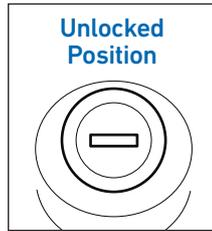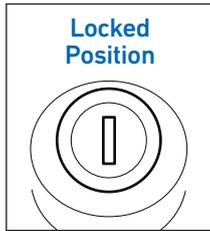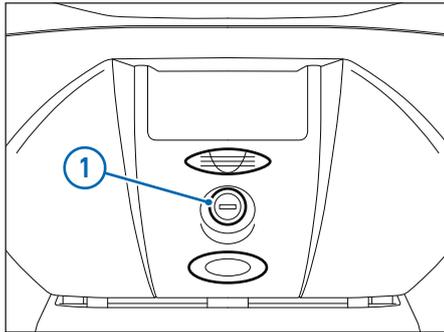


2. To fit the top box, align the top box so that the mounting tabs on the bottom of the top box (A) locate with the mounting slots on the solo rack (B).

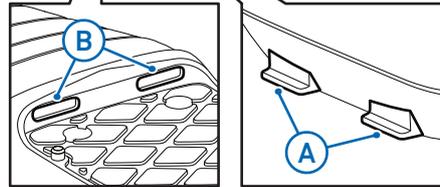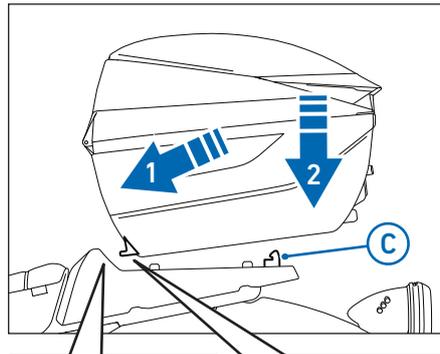

3. Push the top box forwards (1) into the mounting slots and lower the rear of the top box (2) down until the locking mechanism in the base of the top box engages with the top box latch (C).


4. An audible click can be heard when the locking mechanism in the base of the top box is correctly latched in place. Finally, turn the key to the locked position and remove the key.

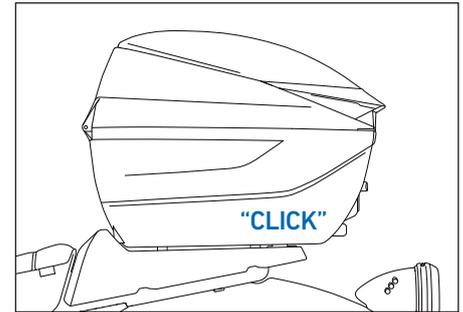


**WARNING:** Before riding, always ensure that the top box is mounted correctly and fully secured. A loose or detached top box could cause loss of motorcycle control and an accident causing injury or death.

### Removing the top box from the solo rack

1. To remove the top box from the solo rack, insert the key in the lock and turn the key to the **UNLOCKED** position.
2. Press the button below the lock on the top box (**1**), this will release the top box from the solo rack.

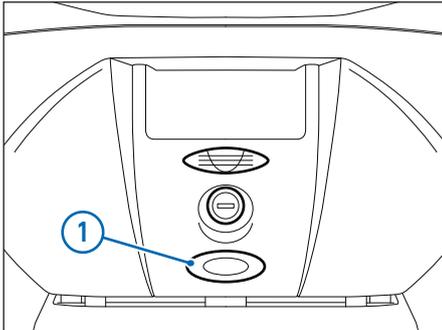


3. Lift the rear of the top box up (**1**) away from the latch and then move the top box back (**2**) to release the front mounting tabs from the mounting slots on the solo rack.

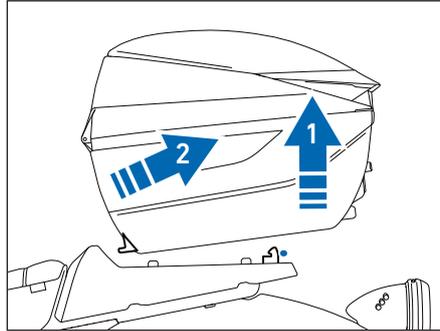

### Opening the top box lid

1. To open the top box lid, turn the key to the **UNLOCKED** position and press the button above the lock on the top box.

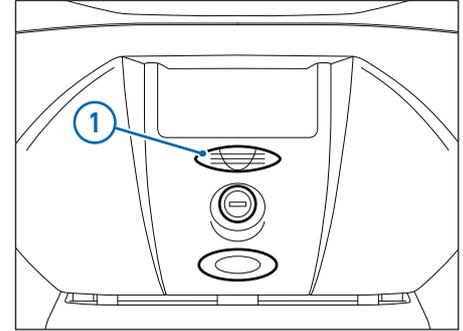

 Always ensure the lock is returned to the **LOCKED** position once the top box lid is closed.

[www.maeving.com](http://www.maeving.com)

For general enquiries in the UK, please email the  
Maeving Support Team at: [support@maeving.com](mailto:support@maeving.com)

© Maeving Limited.

This publication, or any part thereof, may not be reproduced, copied or  
translated without the sole permission of Maeving.

Published: December 2025 - UK Version 1.

For the latest version of these instructions, please visit: [www.maeving.com](http://www.maeving.com).

Produced by Illston Authoring Limited.

For more information visit [www.illstonauthoring.com](http://www.illstonauthoring.com).